



Step #1) Turn off power of machine & main power.

Step #2) Open up the front of the HMI with Allen Key.





Step #3) Unplug Logic connector, Unplug CCFL Backlight connector. Take the Invertor out by Unscrewing the metal mount from HMI. Unplug the inverter cable from inverter.

CCFL CONNECTOR

LOGIC CONNECTOR




UNSCREW THESE SCREWS






Step #4) Unscrew these screws to open the assembly to get to the LCD Panel.

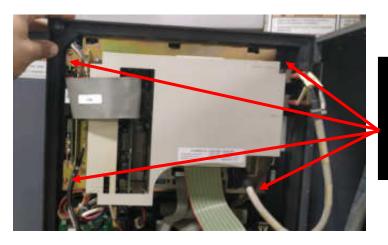


UNSCREW THESE SCREWS

Step #5) Take out the CCFL backlight out of the LCD Panel. There is a lock that holds the light is place free the light with a flat head screwdriver.

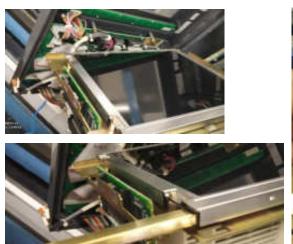



Step #5) Get your Monitech LED Backlight replacement. Slide the backlight into the LCD panel.

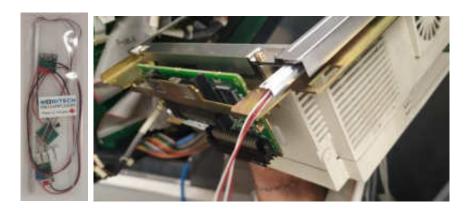


Step #6) Mount the HMI Assembly back on with screws removed in Step #4. Feed the of the backlight as shown.




Step #8) This unit has different inverters to power the lights. Connect our power adaptors to the inverter cable and connect the other side of our adaptor to the Inverter board.

Inverter #1: NEC 104PW161, use the 10-pin power adaptor cable then connect it to our inverter cable.

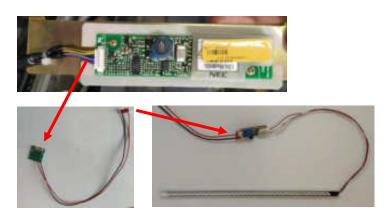

Inverter #2: NEC 104PWBR1, use the 5-pin power adaptor cable then connect it to our inverter cable.

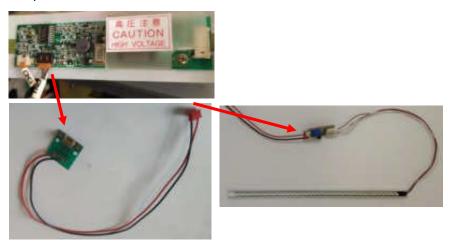


For Other Inverters: Search the pin out online and find out the 12 VDC and the Ground go into the inverter.

Cut the Red & black wire off the board of the power adaptors we sent. Strip the wires.


Use the dual wire connector to connect the 12 VDC of your inverter to the Red wire of either power adaptor. Use the dual wire connector to connect the Ground of your inverter to the black wire of either power adaptor.




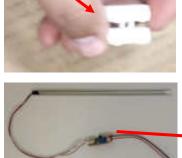



Step #9) Use the accessories in the bag we sent you to mount and zip tie excess wires. Use the double-sided tape to mount the board in place or use the nylon hardware to mount the board in a position that is comfortable with you. Close the HMI Door and screw the fastener to lock the door.

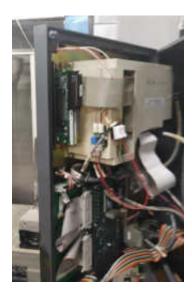

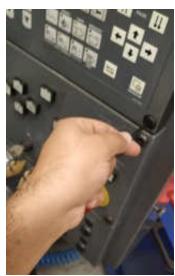

Step #10) Power on your machine and main power. Now you can see!!!



For Technical Support, Call **1-877-493-6105** Support@Monitech.com



20 Howard Place Kitchener, Ontario N2K 4Z4 CANADA 519.725.222 www.monitech.com