

# One touch and you're ready to go



**MONITECH**  
PRACTICAL SOLUTIONS FOR INDUSTRIAL DISPLAYS



# IMPORTANT

## WARRANTY

Before using any MONITECH product please carefully review this Manual as well as any additional documentation provided with your shipment.

### Attempting any of the following will void product warranty:

- unauthorized repairs or parts replacement
- inappropriate use or placement: exposing product to liquids, harmful gases, electrical shock, physical shock, temperatures beyond the range of -20°C to 60°C (-4°F to 140°F)
- use of electrical voltage other than 12V 4.16A (power supply and AC cable provided)
- Removal or modification of serial, product, or warranty labels.

	<b>WARNING</b>	
<b>ELECTRICAL HAZARD DO NOT OPEN</b>		
TO AVOID ELECTRICAL SHOCK DO NOT OPEN PRODUCT CASING. UNAUTHORIZED REPAIRS OR PARTS REPLACEMENT ARE PROHIBITED AND WILL VOID PRODUCT WARRANTY. PLEASE RETURN TO MONITECH FOR REPAIRS.		

## Just press AUTO.

Once you have mounted your new Monitech LCD into your control panel with the video cable attached, check the indicator light on the back of the monitor. If it is already green, it means the video power is on. If the green light is off, press the I/O button to power it up.



Now press **AUTO** on the 5-button menu found on the back of the LCD. After a few seconds, the screen will center the image and automatically adjust the image size, color, brightness and contrast.

That's all there is to it! Your LCD is ready to go


## 4. Adjust brightness and contrast.

If you still need to adjust brightness and contrast, press MENU and the PICTURE menu will appear:



Now press the up ▲ or down ▼ buttons to adjust values.


Press **MENU** three times for other options. You probably will never need these adjustments.

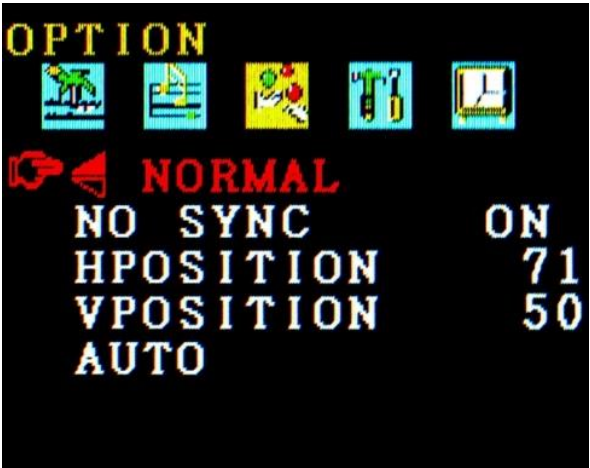

To exit, press MENU until it goes away.

## Video connector

This picture shows the value for six pins on the video connector at the back of the monitor. (The other pins have no application.)

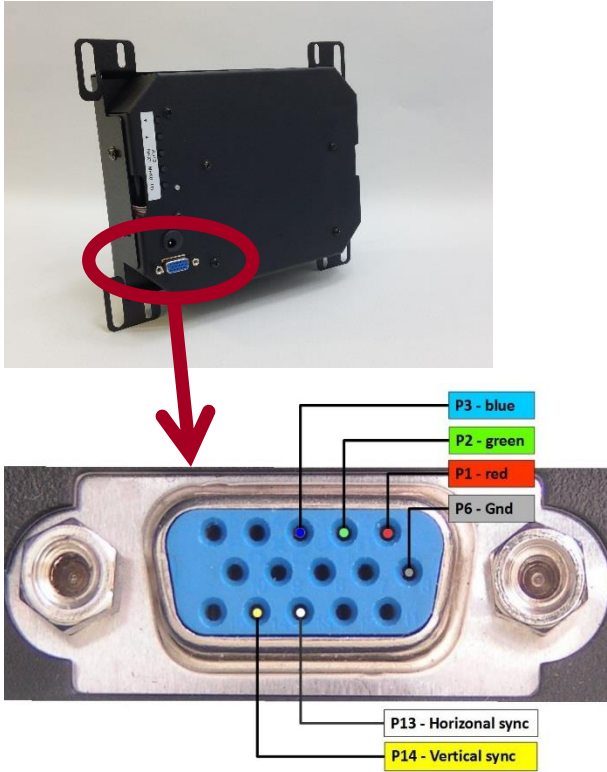

# Troubleshooting

## **My screen is blue and says NO SYNC.**

This means the LCD is getting no video signal from the machine. Reseat the video connector and secure it. Once the video signal is secured, the red light at the back will turn green.

## **How do I deal with intermittent video issues?**

Ensure the video cable does not run close to high-power devices or cables. Ensure they are securely seated and free of damage.

For Technical Support, Call

**1-877-493-6105**

Support@Monitech.com

**MONITECH**

PRACTICAL SOLUTIONS FOR INDUSTRIAL DISPLAYS

20 Howard Place

Kitchener, Ontario N2K 2Z4 Canada

519-725-2222

[www.monitech.com](http://www.monitech.com)

[sales@monitech.com](mailto:sales@monitech.com)