


New LED backlight for your Panelview 600





Unplug and remove power cable.

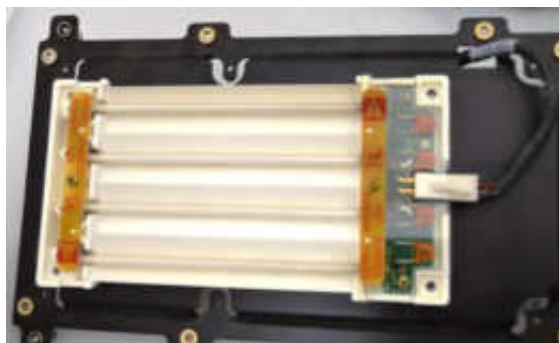

Open hinged access to original backlight by loosening two screws.



Remove the old backlight tray and disconnect cable. Keep screws handy.

Disconnect power cable.

Install LED tray using the original screws.



Remove power supply (4 screws).




Remove the 4 pin square plug from the assembly.




Route wire through.

The new style connector is easy to slide into the gold pins. Make sure red wire goes onto the 12 gold pin.

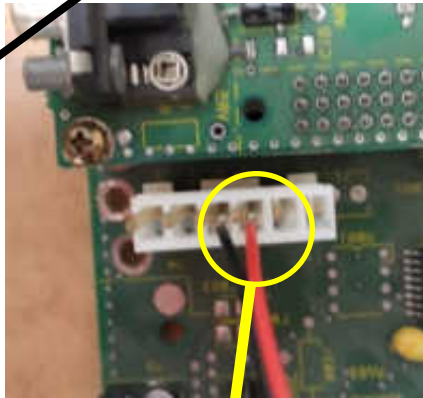

Connect LED power wire onto the terminal posts between main board and power supply.

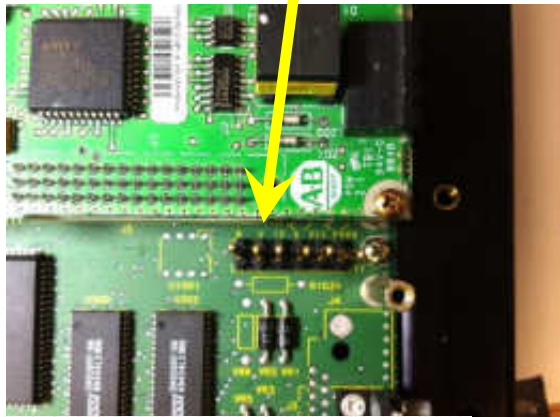

Insert **red wire** onto the pin marked 12.

Reinstall
power supply.



Reattach back
cover.

Caution: when
installing the back
cover, make sure
the red and black
wires are not
pinched.



If possible, bench test the unit
before returning to service.

Enjoy your rejuvenated Monitor.
Call us to order more HMI replacement parts.

Keep your AB PanelView's up and running!



Replacement: LCD's, Backlight's, Keypad's & Touchscreen's for the whole 550 line.

Replacement: LCD's, Backlight's, Keypad's & Touchscreen's for the whole 600 line.



Replacement: LCD's, Backlight's, Keypad's & Touchscreen's for the whole 900 line.

Replacement: LCD's, Backlight's, Keypad's & Touchscreen's for the whole 1000 line.



Replacement: CRT TO LCD CONVERSION's, Backlight's, Keypad's & Touchscreen's for the whole 1200 line.

Replacement: CRT TO LCD CONVERSION's, Backlight's, Keypad's & Touchscreen's for the whole 1400 line.

For Technical Support, Call
1-877-493-6105
Support@Monitech.com



20 Howard Place
Kitchener, Ontario N2K 4Z4
CANADA 519.725.2222
www.monitech.com